




## Engraving Machine Type Dials

### User Instructions:

The new Pepetools, Inc. script inside ring engraving disc will require a different letter spacing than the four clicks recommended for the standard disc supplied with the inside ring engraver. Through our testing, we have determined that three (3) clicks will give the correct spacing of the letters. Although you can use just the upper case letters exclusively, it is not recommended. To engrave, select the upper case letter and proceed to engrave it on the inside of the ring. Next, turn the disc over to the lower case letters and continue to engrave your message. Unlike other disc of this type, proper alignment of the upper and lower case letters is achieved automatically.

To adjust the number of clicks, simply loosen the nut on click stop screw. Rotating the click stop screw CCW (left) shortening the exposed end of the screw will produce more clicks expanding the space between the letters. Turning the screw CW (right) extending the exposed end of the screw will lessen the number of clicks and bring the letters closer together.

See illustration

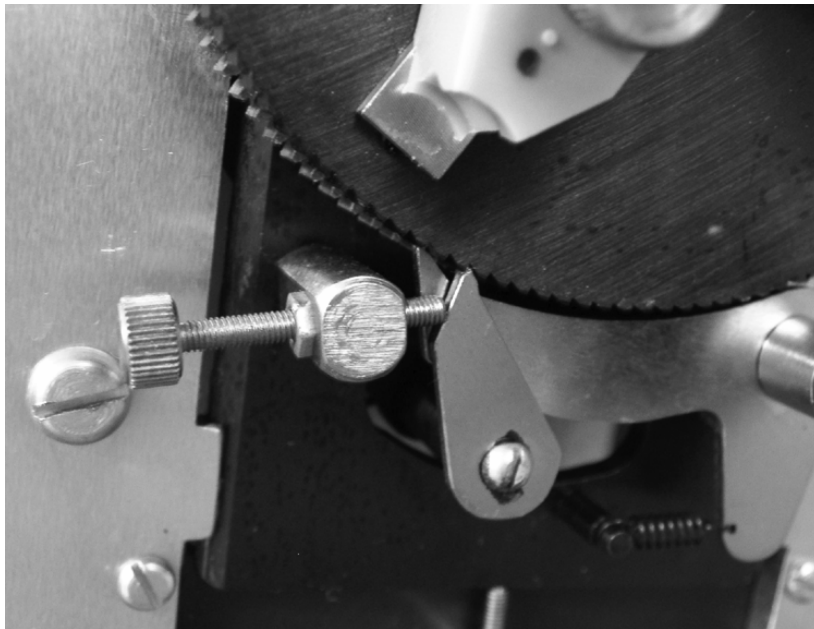

*Thank you for choosing Pepetools!*